


NET24 & NET230

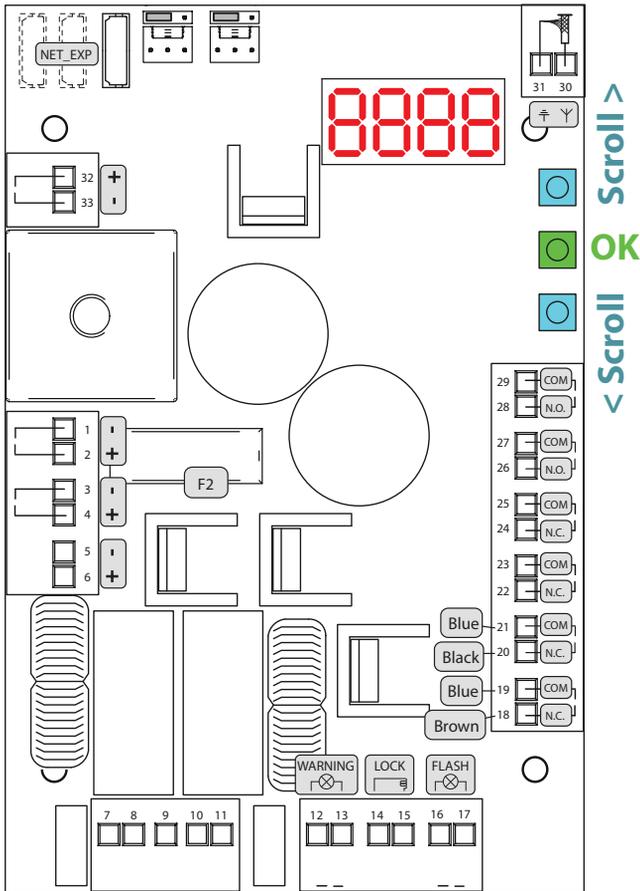

SHORT / CUTS

LCD	Function
----	Gate closed
┌ ─┐	Gate open
OPEN	Gate opening
CLOS	Gate closing
STOP	Gate stopped
STEP	Gate in step by step. Waiting for user command
RESP	Normally flashing and occurs after power failure. The control unit is confirming open and close limits. If automatic close is disabled, need to manually trigger close or gate will stay open.
ERR3	Photo beam/cell not connected or aligned.

Parameter	Function	Options
P001	Open and close motor using control board	"+" to open gate "-" to close gate
P003	Learn stroke (The gate must be half open before learning the stroke)	Press "OK" on P003 to see APPR flashing. Then press and hold "OK" until APPR stops flashing. Motor will then move in the open direction, followed by close
P005	Learn transmitter (Up to 100 remotes)	Press "OK" on P005 to enter learn. Then press button on transmitter
P041	Set automatic close wait time (off by default 0000)	+ Increase wait time - Decrease wait time
P063	Change installation side. (Looking at the motor from the inside of the property)	0000 motor on left hand side 0001 motor on right hand side